



Actualizar Firmware Grandstream

1. Ingresar a la pagina de firmware de Grandstream
<http://www.grandstream.com/support/firmware?hsLang=en> y buscar la referencia del equipo
2. Tomar nota del http que corresponde para la actualización.

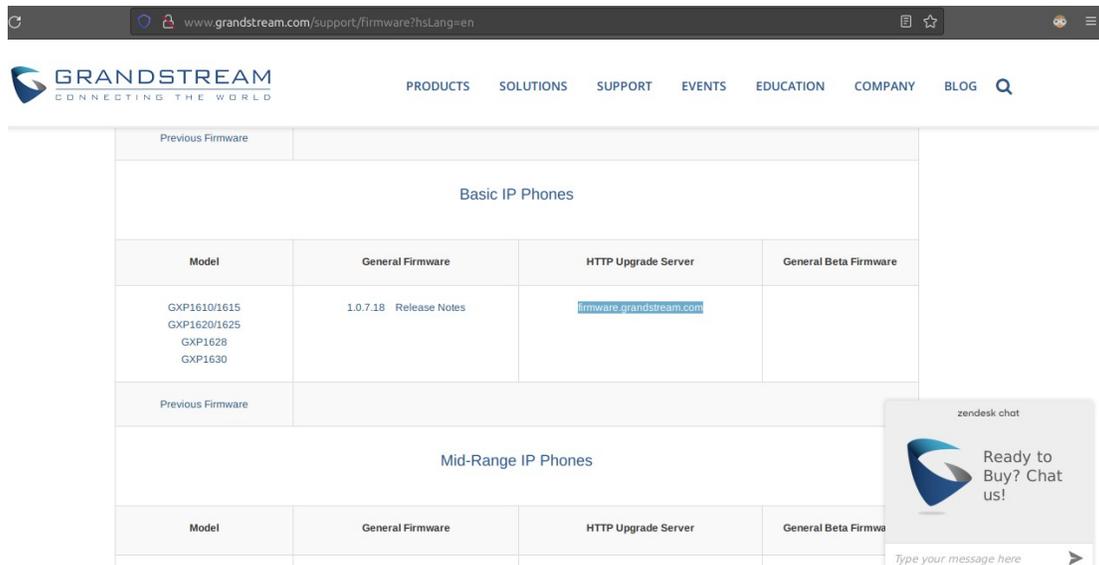

3. Ingresar a el teléfono en el menú de **mantenimiento** → **actualización y aprovisionamiento**.

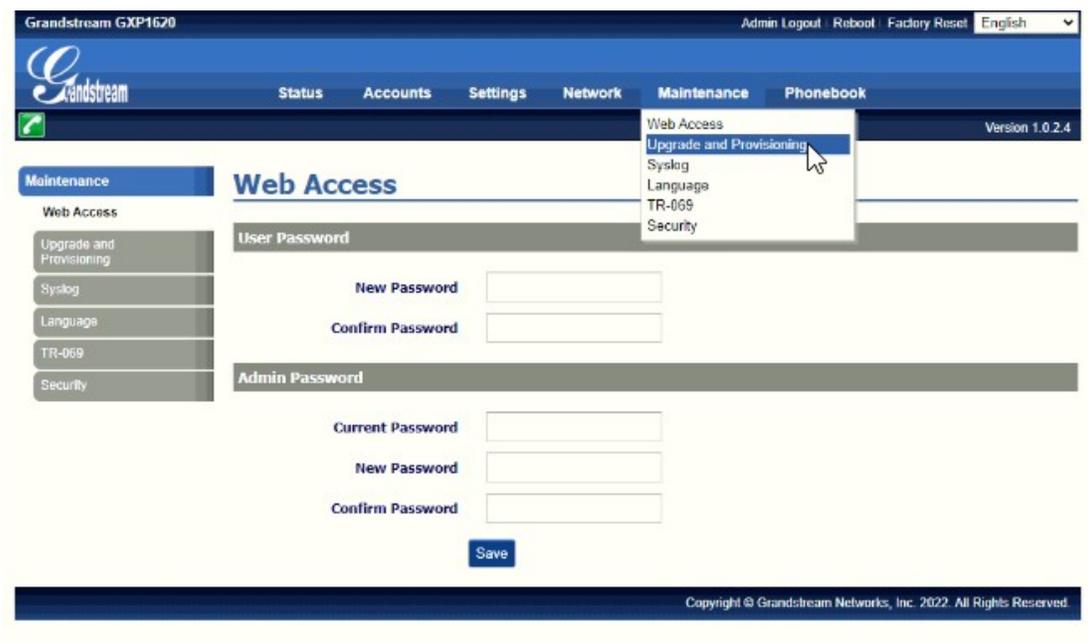

- Ingresar el http del server que se obtuvo del primer paso en la web dentro del campo server path y marcar http como vía de actualización.

Upgrade and Provisioning

Firmware Upgrade and Provisioning

- Always Check for New Firmware
- Check New Firmware Only When F/W pre/suffix Changes
- Always Skip the Firmware Check

XML Config File Password:

HTTP/HTTPS User Name:

HTTP/HTTPS Password:

Always Authenticate Before Challenge: No Yes

Validate Hostname in Certificate: No Yes

Upgrade via: TFTP HTTP HTTPS

Firmware Server Path:

Config Server Path:

Firmware File Prefix:

Firmware File Postfix:

Config File Prefix:

Config File Postfix:

Allow DHCP Option 43 and Option 66 to Override Server: No Yes

Allow DHCP Option 120 to Override SIP Server: No Yes

3CX Auto Provision: No Yes

Automatic Upgrade: Yes, check for upgrade every 1008 minute(s)

Yes, check for upgrade every day

Yes, check for upgrade every week

Hour of the Day(0-23):

Day of the Week (0-6):

Disable SIP NOTIFY Authentication: No Yes

Authenticate Conf File: No Yes

Download Device Configuration: [Download](#)

[Save](#) [Save and Apply](#) [Reset](#)

- Guardar y aplicar, antes de reiniciar verificamos la versión actual 1.0.2.4 y posteriormente click en reboot.



- Verificar nueva versión 1.0.7.18

